


BATTERY-OPERATED MINI VACUUM CLEANER

ZOpid®

HP-ZV180B

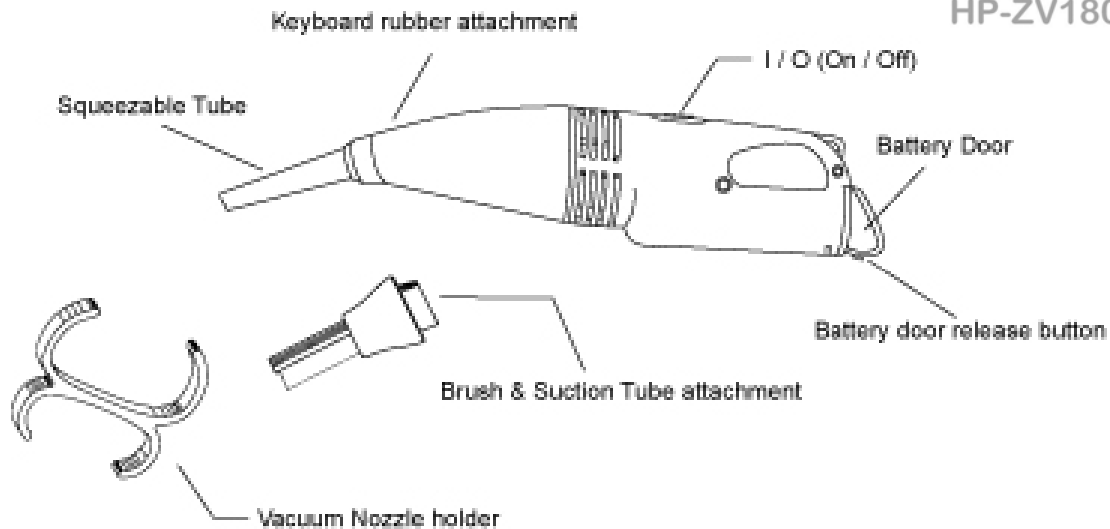

FEATURES & OPERATIONS

- **Installing / replacing batteries:**
 - push the battery door release button and lift the battery door upwards
 - Insert 2 x AA batteries (Alkaline batteries recommended – batteries not included) into the battery compartment located at the handle of the Mini Vacuum Cleaner
 - Follow the polarity guide when inserting batteries
 - Close the battery door by pushing the battery door to the base of vacuum until it is secured.
- Slide the switch to “I” to turn ON the Vacuum. “O” represents the OFF position.
- Use the keyboard rubber attachment to vacuum the dust and other particles trapped underneath the keyboard keys, by sliding the squeezable tube between keys and then, turning the vacuum ON.
- Use the Brush & Suction Tube attachment for general cleaning of air vents, monitor & computer areas, or dust on desktop.
- Use the Vacuum Nozzle holder to connect the two nozzles to the Vacuum for safe storage, when not in use.

CAUTION:

1. DO NOT IMMERSE IN WATER & DO NOT USE TO VACUUM WATER
2. BATTERIES MAY OCCASIONALLY LEAK & DAMAGE UNIT IF LEFT INSIDE BATTERY COMPARTMENT UNUSED FOR A LONG PERIOD OF TIME. REMOVE BATTERIES FROM BATTERY COMPARTMENT IF UNIT WILL NOT BE USED FOR A LONG PERIOD OF TIME.
3. KEEP AWAY FROM DIRECT HEAT OR SUNLIGHT - STORE IN COOL OR ROOM TEMPERATURE ONLY.
4. DO NOT USE RECHARGEABLE BATTERIES

DISTRIBUTED BY:

Hi-Tech Trading USA Inc.
PO Box 179
Woodbury, NY 11797

CUSTOMER SUPPORT:

Website: www.hittusa.com
Email: help@hittusa.com


WARNING:

This product is not a toy. Small parts could be a choking hazard. Not for children under 5 years

ZOpid HP-ZV108B Mini Vacuum - TROUBLESHOOTING TIPS:

Vacuum does not power on

Make sure the batteries are installed properly - If you are holding the vacuum as shown in the picture then positive and negative terminals of the two batteries must be facing you as illustrated i.e. + terminal of the battery on the right and – terminal of the battery on the left

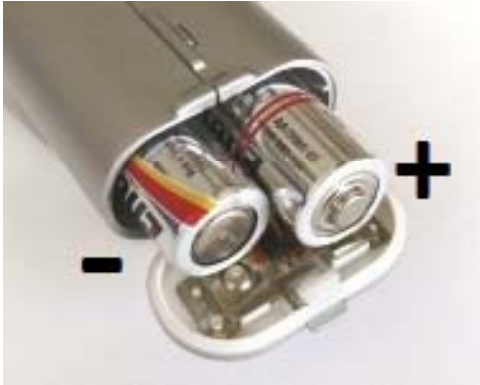

Vacuum powers on but does not pickup anything (not strong enough suction power)

- This vacuum is designed to clean small particles like dust, food crumbs, small staples, eraser residue, etc. and also clean hard to reach areas like between computer's keyboard keys etc. If the vacuum does not pickup small particles then:
 - Make sure you are not using rechargeable batteries - it's not required but for the best suction power we highly recommend using **alkaline batteries** - unlike digital products without moving parts which work on any kind of batteries, this mini vacuum with a motor works best with alkaline batteries.
 - Make sure that both batteries are not bad/old -> Even though you put new batteries in the vacuum, if possible, please test batteries in a flash light (or some other device) to confirm both batteries are good
 - You must use one of the two attachments when using the vacuum - the attachments are designed to provide best suction power - Please note that if you put your hand next to the nozzle when vacuum is on, it will not stick to the nozzle (like what happens with bigger vacuums) - this vacuum is designed to pick small things - for which it works well when used with one of the provided nozzles.
 - Once you have used the mini-vacuum for a few times, please check the waste storage area to make sure it's not full – open the vacuum and empty the storage area
 - Check to make sure there is no blockage in the nozzle – remove the nozzle and try using the vacuum without the nozzle – if needed remove whatever is inside the nozzle path.
 - Make sure nothing blocks the vents when using the vacuum – hold the vacuum from the handle while using