



Voice Dialing

Requires phone with voice-dialing feature and with voice names already stored on phone's contacts/address book

To activate voice dialing on the carkit, press  button once (the phone will beep)

IMPORTANT: some phones require pressing  button again right after the beep is heard (the phone will beep again)

Say the voice name stored in phone's contacts/address book

If voice match is found, the phone will announce the name stored in address book and dial the number

If no voice match is found, the phone will beep twice

NOTE: During voice dialing, any voice prompts from the cell phone, can only be heard directly on the phone and not thru the carkit speakers

Volume Control

The volume of the incoming call on the **cell phone** must be set to maximum

IMPORTANT: Set the **cell phone** volume when you are on a phone call – otherwise it's the ring volume that gets adjusted

Once the phone volume is set to maximum, further volume adjustments can be made directly from the carkit using vol+ and vol- buttons

Pairing Multiple Bluetooth Devices

The carkit can store pairing information of up to 4 bluetooth devices.

IMPORATANT: Only one bluetooth device can be used at a time with the carkit