

# ZOpid<sup>®</sup> zClipOn TOUCH



## USER MANUAL

*The pictures, diagrams, and certain functions described in this manual may differ from the actual product due to different models*

Visit [www.hittusa.com](http://www.hittusa.com) to download user manual or check FAQs  
and troubleshooting tips

## PREFACE

We express our sincere thanks for purchasing our MP3 Player! Before operating this MP3 Player, be sure to read this user manual carefully. After reading it, please keep it in a safe place for future reference.

We reserve the right to make changes to this MP3 Player and/or this user manual without notice. Please visit our support website [www.hittusa.com](http://www.hittusa.com) for additional product information and/or updates.

**NOTE:** The pictures, diagrams, and certain functions described in this manual may differ from the actual product due to different models.

## SAFETY AND GENERAL INFORMATION

### READ THIS INFORMATION BEFORE USING THIS MP3 PLAYER

- A. Loud music may harm your hearing if you listen to it for a long time.
- B. New battery can reach its best performance after it has completely charged and discharged for two or three times.
- C. Please charge the new battery for no less than 10 hours for the first three times you are charging, then from the fourth time on, just charge it for six hours and it can reach its best performance.
- D. Do not operate this MP3 Player in extremely cold, hot, dusty or damp environment.
- E. Avoid putting this MP3 Player under direct sunlight
- F. Do not scrub this MP3 Player with a hard object; it may result in scratches on the screen and/or damage to the hardware. Use a damp cotton cloth to gently wipe the shell of the player. Using other chemical cleaning solutions is strictly prohibited.
- G. Keep this MP3 Player and all accessories out of children's reach under 3 years old.
- H. Charge the MP3 Player when:
  - The battery capacity icon is empty and flashing
  - The MP3 Player powers off automatically, immediately after it is turned on.
- I. Avoid operating this MP3 Player under very dry environment to prevent damage from static-shock.
- J. Do not disconnect the USB cable while formatting, uploading or downloading files; disconnecting USB cable will result in file corruption and may require reformatting – resulting in data loss.
- K. When used as a removable disk, users should backup important data. Our company is not responsible for loss of data.
- L. This MP3 Player does not have any user-serviceable parts or accessories. DO NOT TRY TO DISASSEMBLE THIS MP3 Player. Use an AC charger with 5V & 500mA output.
- M. Use battery charger and accessories permitted by the manufacturer. Using other accessories or charger may be a safety hazard or affect product performance and/or void product warranty.
- N. Please properly dispose of the obsolete player and its accessories following your local environmental laws.
- O. If you have any problem using this player, please visit [www.hittusa.com](http://www.hittusa.com) or email [help@hittusa.com](mailto:help@hittusa.com) for help

**NOTE: Please charge the player for at least 10 hours BEFORE first time use.**

## NOTES REGARDING FCC COMPLIANCE

Users are not permitted to make changes or modify the device in any way. Changes or modifications that are not authorized by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

## TABLE OF CONTENT

 
<b>PRODUCT FEATURES.....</b>	<b>4</b>
<b>KNOW THE PLAYER.....</b>	<b>4</b>
Buttons and Ports.....	4
Turning player ON or OFF.....	4
Touch Screen Navigation.....	5
Navigation Buttons.....	5
Battery.....	5
Connecting player to a computer and copying files.....	5
Adjusting Volume.....	5
<b>MAIN MENU.....</b>	<b>6</b>
<b>MUSIC.....</b>	<b>6</b>
<b>MOVIE.....</b>	<b>8</b>
<b>PEDOMETER.....</b>	<b>10</b>
<b>RADIO.....</b>	<b>11</b>
<b>BROWSER.....</b>	<b>12</b>
<b>CALENDAR.....</b>	<b>13</b>
<b>MEMORY.....</b>	<b>13</b>
<b>SETTINGS.....</b>	<b>14</b>
<b>PHOTOS.....</b>	<b>15</b>
<b>E-BOOK.....</b>	<b>16</b>
<b>RECORD.....</b>	<b>17</b>
<b>VOICE.....</b>	<b>19</b>
<b>USB DISK.....</b>	<b>20</b>
<b>TROUBLESHOOTING.....</b>	<b>21</b>
<b>TECHNICAL SPECIFICATIONS.....</b>	<b>21</b>
<b>WARRANTY INFORMATION.....</b>	<b>22</b>

## PRODUCT FEATURES

- Clip-on design with 1.5 inch TFT full color Touch Screen display
- Multi file format support - supports MP3, WMA (non-DRM) & WAV audio files - AVI & AMV (128x128 resolution only) video files – BMP, JPG & GIF picture files (up to 12 Mega Pixels)
- FM Radio - with 20 channels preset and FM recording
- e-Documents - Read text files (.TXT)
- Voice Recorder - Voice can be recorded and saved in WAV file format
- Equalizer Settings - 7 Equalizer settings - Natural, Rock, Pop, Classic, Soft, Jazz & DBB – Also included is SRS-WOW for user selectable 3D and TruBass effects
- Music Play Mode Settings - Once, Repeat One, Folder, Repeat Folder, Repeat All, Random and Intro
- Power Save Mode - User selectable sleep (power save) and shut down timings
- Graphic User Interface - Menu with icons for a user-friendly interface
- Pedometer – Enable this feature to measure distance traveled and Calories burnt while walking or running
- The Player can be charged by connecting the USB cable to computer's USB port or an optional Power Charger

## KNOW THE PLAYER

### Buttons and Ports

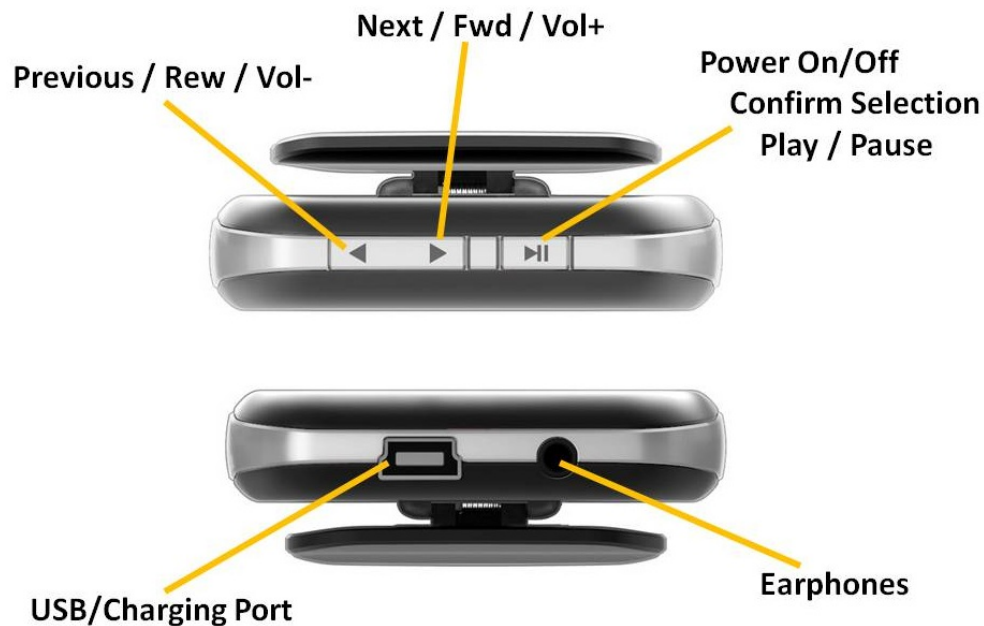


### Turning Player ON or OFF

Press and hold ►|| button to turn player ON or OFF

If player is not in use, the player will turn off automatically after preset time, if Auto Shutdown under Settings is enabled

## Touch Screen Navigation

- Slide finger from Right to Left or Left to Right on the Main Menu screen to view various Menu options
- Slide finger from Top to Bottom or Bottom to top to view list of sub-Menu options
- Touch Menu options and screen buttons and icons to make selection
- Slide finger from **Left to Right** on the screen while in play mode to display functions supported in that mode
- Slide finger from **Right to Left** to go back to the previous screen
- Press  icon on the screen to go back to the previous screen
- Slide finger, while in play mode, from Top to Bottom or Bottom to Top to decrease or increase the volume respectively
- Slide finger, while adjusting values in setup mode, from Top to Bottom or Bottom to Top to decrease or increase the value e.g. adjusting time settings, or weight or step size for Pedometer settings

 
## Navigation Buttons

- In addition to touch screen, use navigation keys ◀ or ▶ to select menu options, and when playing music, to select Previous or Next song, and Fast Rewind or Fast Forward
- Press ▶| key to confirm selection and also to Play and Pause

**Battery:** The Player can be charged by connecting the USB cable to computer's USB port or an optional Power Charger


- Solid battery icon means the battery is fully charged; as the player is used the battery level indicator will be partially filled
- Blank battery indicator means the battery charge is low and must be plugged in to charge the battery.

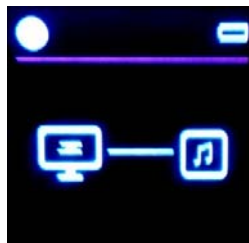

**Connecting player to a computer & Copying files:** Insert smaller end of the USB cable in the USB port on the player and the bigger end into an available USB port on your computer. Once recognized as a USB device the following icons will be displayed on the player's screen:



Once player is recognized as a removable disk, users can copy files from computer's hard disk to player's memory using file manager application from the computer.

## Adjusting Volume

In play mode touch  icon or slide finger up or down to adjust volume level, from 0 – 40 or

touch  or  icons to adjust the volume **NOTE:** After adjusting volume press ▶| button to exit volume adjust mode or player will automatically exit volume adjust mode after 5 seconds

 
## MAIN MENU

Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the screen to display the following three Main Menu screens



## MUSIC

Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Music icon in the Main Menu

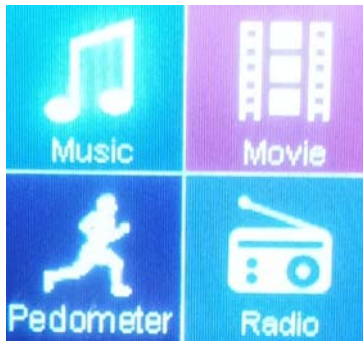

Press ▶ button or touch the music icon  to enter Music Play mode.







Press ▶ button or touch Play icon on the screen to play music file

In music mode press ◀ or ▶ button, or touch ◀ or ▶ icon to choose next or previous music file.




In play mode press and hold ◀ or ▶ button or touch and hold ◀ or ▶ icon to fast forward

or rewind song currently playing


In play mode touch  icon or slide finger up or down to adjust volume level, from 0 – 40 or touch  or  icons to adjust the volume **NOTE:** After adjusting volume press  button to exit or player will automatically exit volume adjust mode after 5 seconds.

### **File Management Sub-Menu**

 When player is in **Pause Mode** slide finger left to right on screen to display file management sub menu




**NOTE:** Use ,  and  buttons or slide your finger up or down and touch the menu option for navigation and selection



- Local folder (use this option to select different file or folder from player's memory)
- Delete file
- Delete folder
- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

### **Music Settings Sub-Menu**

 When player is in **Play Mode** slide finger left to right on screen to display Music Settings sub menu

**NOTE:** Use ,  and  buttons or slide your finger up or down and touch the menu option for navigation and selection

- Repeat [Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random, Intro], or touch  icon to display Repeat Mode sub menu.
- Equalizer [Natural, Rock, Pop, Classic, Soft, Jazz, DBB], or touch  icon to display Equalizer sub menu.
- SRS WOW [SRS WOW, User Setting (SRS 3D, TRUBASS, FOCUS, Exit), Disable SRS WOW]
- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

### **Lyrics synchronization**

The player supports \*.lrc lyric files to display synchronized lyrics. If lyric file is found, the lyrics

are displayed on the screen

 


say you say me ...



## MOVIE

Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Movie icon in the Main Menu

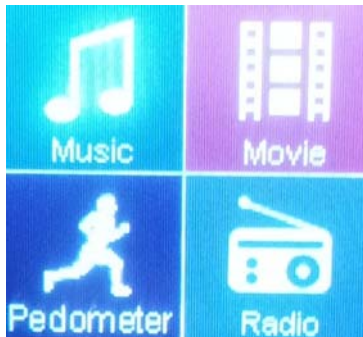


Press ▶ button or touch the movie icon  to enter movie mode.



Press ▶ button or touch Play icon on the screen to play .AMV movie files

In AMV (Movie) mode press ◀ or ▶ button, or touch ◀ or ▶ icon to choose next or previous .AMV video file.

In play mode press and hold ◀ or ▶ button or touch and hold ◀ or ▶ icon to fast forward or rewind video currently playing

In play mode touch  icon or slide finger up or down to adjust volume level, from 0 – 40 or


touch + or - icons to adjust the volume **NOTE:** After adjusting volume press ▶ button to exit or player will automatically exit volume adjust mode after 5 seconds.

### **File Management Sub-Menu**

 When player is in **Pause Mode** slide finger left to right on screen to display file management sub menu

**NOTE:** Use ◀, ▶ and ▶ buttons or slide your finger up or down and touch the menu option for navigation and selection

- Local folder (use this option to select different file or folder from player’s memory)
- Delete file
- Delete folder
- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

**Convert AVI and other formats video files to AMV format file**

This player can only play video files in AMV format with 128 x 128 resolution. To convert files from other video file formats to AMV file in 128 x 128 resolution, please visit our support website [www.hittsa.com](http://www.hittsa.com) and download a file conversion utility. Click on “Manuals & Downloads” and look for model number zClipOn-Touch under MP3 & Media Players.

1. Download and install the conversion utility on your PC – Click on Help link to see online user manual to use the utility.



2. Choose a video file to convert to .AMV format (make sure the file resolution is set to 128x128)



3. Click “Convert” button, the conversion starts





4. Copy converted .AMV file to player’s memory to play it on the player

## PEDOMETER

Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Pedometer icon in the Main Menu

 



Press ▶ button or touch the Pedometer icon  to enter Pedometer mode

**NOTE:** Pedometer function is also accessible directly from Music, Movie, Radio and Voice modes by touching  icon on the screen



- Touch “OFF” icon or press ▶ button to start pedometer function, number of steps taken, the time spent and calories burnt is show on the screen when walking and running
- Touch “ON” or press ▶ button to stop Pedometer function.

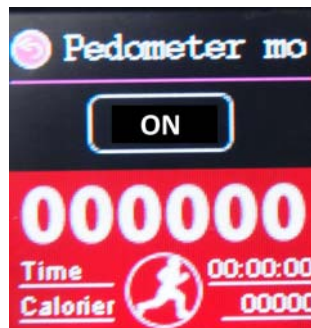

- Slide finger **right to left** on screen or touch  icon to go back to the previous screen

**NOTE:** Step size, Weight and Units can be setup from **Pedometer Set** option under Settings in the Main Menu



## RADIO

Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Radio icon in the Main Menu





Press ▶ button or touch the Radio icon  to enter FM Radio mode





Press ◀ or ▶ button or touch  or  to change radio-frequency, Press and hold ◀ or ▶ button for a couple of seconds to start auto scan and search channels

Press and release ◀ or ▶ button to stop auto search

Touch  to switch to the next saved channel **NOTE:** This icon will appear after at least one channel is saved.

In Radio mode touch  icon or slide finger up or down to adjust volume level, from 0 – 40 or

touch  or  icons to adjust the volume **NOTE:** After adjusting volume press ▶ button to exit or player will automatically exit volume adjust mode after 5 seconds

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

### **FM Radio Settings Sub-Menu**

When player is in Radio **Mode** slide finger left to right on screen to display Radio Settings sub menu

 
**NOTE:** Use ◀, ▶ and ▶| buttons or slide your finger up or down and touch the menu option for navigation and selection

- Save (Save a radio channel as a Preset)
- Record (Record what's currently playing on the radio)
- Delete (Delete a Preset channel)
- Delete All (Delete all Preset channels)
- Auto Search (Start channel Auto Search – same as pressing and holding ◀ or ▶ button for a couple of seconds to auto scan for radio channels – Press and release ◀ or ▶ button to stop auto scan)
- Normal Band (select this option if using this player in Americas & Europe (Radio Frequency between 87MHz and 108Mhz)
- Japan Band (Select this option if using this player in Japan – Radio Frequency between 76MHz and 90MHz)
- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

## BROWSER


Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Browser icon in the Main Menu

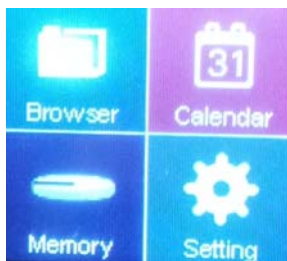

Press ▶| button or touch the Browser icon  to enter Browser mode

Use ◀, ▶ and ▶| buttons or slide your finger up or down and touch the menu option for navigation and selection

 
Touch Local Folder to display content of the built in memory – This option displays all files and folders on the player's memory Enter into card folder can choose any files, the function is available. **NOTE:** Touch/Select top-most entry in the file/folder list to go back to the previous folder – ROOT is the top-most level

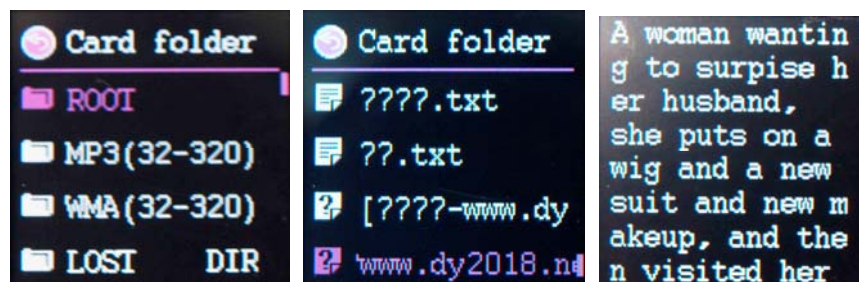


**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

## CALENDAR

 
Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Calendar icon in the Main Menu

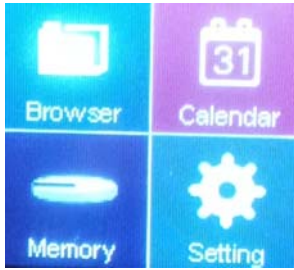

Press ▶ button or touch the Calendar icon  to view Calendar





Touch ◀ or ▶ button or touch  or  icon to choose previous or next calendar day.

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen


## MEMORY

  Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Memory icon in the Main Menu

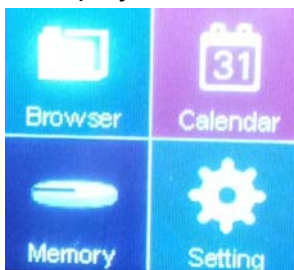


Press ▶ button or touch the Memory icon  to view player's built-in memory information like Total Storage Capacity and Space Used



**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen


## SETTTINGS

 Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Settings icon in the Main Menu

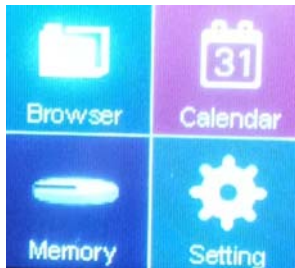



 
Press ▶ button or touch the Settings icon  to enter player's Setup menu

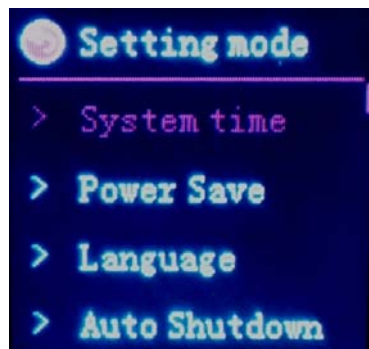

Use ◀, ▶ and ▶ buttons or slide your finger up or down and touch the menu option for navigation and selection



**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen


- **System time**
  - Touch  or  to select year, month day, hour, minute and second
  - Press ◀ or ▶ button to adjust these values
  - Touch  icon to save system time
- **Power Save** – Display black screen to extend battery usage - Use ◀ or ▶ button to




- adjust time between 0 to 50 seconds –to disable this feature change setting to 0)
- **Language** - (see Technical Specifications for list of languages)
  - **Auto Shut Down** - (Automatically turn of the player if it's not in use - Use ◀ or ▶ button to adjust time between 0 to 200 seconds –to disable this feature change setting to 0)
  - **Lock Screen** - (Automatically locks the screen after inactivity time setup in this option has passed - Use ◀ or ▶ button to adjust time between 0 to 60 seconds –to disable this feature change setting to 0) – When the screen lock is activated **“Please drag the slider to the right to unlock”** message is displayed when any button is pressed or the screen is touched
  - **Time format** – Select 12 hour or 24 hour time format (time display feature not supported in this firmware version)
  - **Format Device** – Use this option to format built-in memory – **WARNING:** using this option will delete all the data on the player's memory
  - **Firmware Version**
  - **Firmware Upgrade** (not currently supported)
  - **Pedometer set** – Use this option to change pedometer settings
    - **Step size** – adjust step size (inches or centimeters) by sliding finger top to bottom or bottom to top on the screen
    - **Weight** - adjust weight (pounds or kilograms) by sliding finger top to bottom or bottom to top on the screen
    - **Units** – Select either Imperial system (inches and Pounds) or Metric system (Centimeters and Kilograms) for Step size and Weight
    - **Exit** - Touch this option or Slide finger **right to left** on screen or touch  icon to go back to the previous screen
  - **Touch screen calibration** – Use this option to calibrate touch screen – touch “+” symbol on the screen when displayed in different parts of the screen to calibrate the screen
    - **Exit** - - Touch this option or Slide finger **right to left** on screen or touch  icon to go back to the previous screen


## PHOTOS

  Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Photos icon in the Main Menu

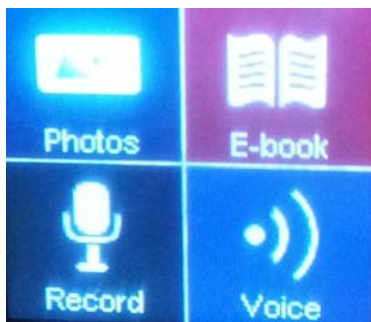



 Press ► button or touch the Photos icon  to display list of picture files

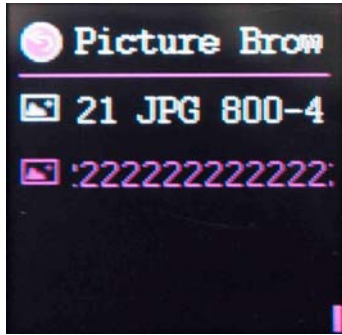

Use ◀, ▶ and ► buttons or slide your finger up or down on the screen and touch the file name to display that picture

When player is in **Photos Mode** slide finger left to right on screen to display Photo settings sub-menu

### Photo Settings Sub-Menu

 
Use ◀, ▶ and ► buttons or slide your finger up or down and touch the menu option for navigation and selection


- Local Folder (use this option to select different file or folder from player's memory)
- Playback Set
  - Manual Play
  - Auto Play (Slide show mode - Set each picture display time from 1 to 10 seconds)
- Delete File
- Delete All
- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

## E-BOOK

Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select E-book icon in the Main Menu

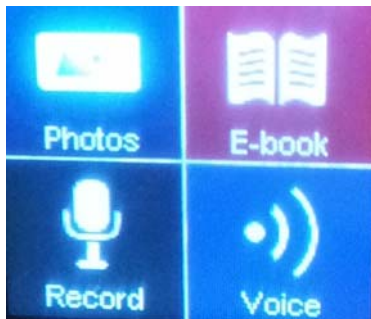

Press ► button or touch the E-book icon  to display list of text files

Use ◀, ▶ and ► buttons or slide your finger up or down and touch a file name to display the

text file

When player is in **E-book Mode** slide finger left to right on screen to display File management sub-menu

### **File Management Sub-Menu**

Use ◀, ▶ and ▶| buttons or slide your finger up or down and touch the menu option for navigation and selection

- Local Folder (use this option to select different file or folder from player's memory)
- Playback Set
  - Manual Play
  - Auto Play (Automatically go to next page - Set each page display time from 1 to 10 seconds)
- Delete File
- Delete All
- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

When player is in Text file View Mode slide finger left to right on the screen to display Music Settings sub menu

### **e-Book Settings Sub-Menu**

 
Use ◀, ▶ and ▶| buttons or slide your finger up or down and touch the menu option for navigation and selection

- Bookmark Select (View list of saved bookmarks)
- Bookmark Delete (Delete saved bookmarks)
- Bookmark Add (Save a new bookmark)
- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen


## **RECORD (Voice Recording)**


Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Record icon in the Main Menu

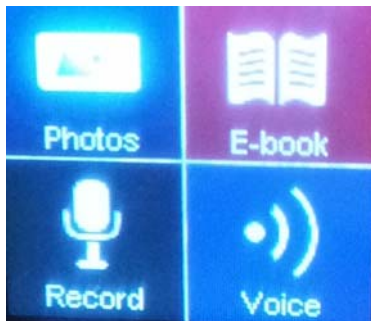

 
Press ► button or touch the Record icon  to enter Voice Recording mode



Press ► or touch  icon to start, pause and restart recording

To save recording press and hold ► button for a couple of seconds or slide finger right to left on the screen or touch  icon


Touching  icon automatically saves recording and exit to the main menu.

When player is in stop or pause mode, slide finger left to right on the screen to display Record Settings sub menu

### **Record Settings Sub-Menu**

 
Use ◀, ▶ and ► buttons or slide your finger up or down and touch the menu option for navigation and selection

- REC type (determines quality of recorded voice file)
  - 28 Kbps (approximately 60 hours of recording per GB of memory)
  - 64 Kbps (approximately 30 hours of recording per GB of memory)
  - 128 Kbps (approximately 15 hours of recording per GB of memory)
- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

## VOICE (Listen to Voice-Recording files)

 Use ◀ or ▶ button, or slide finger from Right to Left or Left to Right on the Main Menu screen to display and select Voice icon in the Main Menu

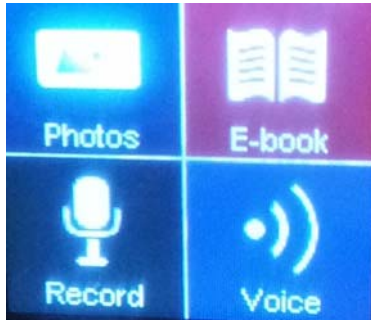




Press ▶ button or touch the Voice icon  to enter Voice-Recording play mode





Press ▶ button or touch Play icon on the screen to play music file

In play mode press ◀ or ▶ button, or touch  or  icon to choose next or previous voice file.

In play mode press and hold ◀ or ▶ button or touch and hold  or  icon to fast forward or rewind voice file currently playing

In play mode touch  icon or slide finger up or down to adjust volume level, from 0 – 40 or

touch  or  icons to adjust the volume **NOTE:** After adjusting volume press ▶ button to exit or player will automatically exit volume adjust mode after 5 seconds.


### File Management Sub-Menu

 When player is in **Pause Mode** slide finger left to right on screen to display file management sub menu

**NOTE:** Use ◀, ▶ and ▶ buttons or slide your finger up or down and touch the menu option for navigation and selection

- Local folder (use this option to select different file or folder from player's memory)
- Delete file
- Delete all


- Exit

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen


### **Play Settings Sub-Menu**

 
When player is in **Play Mode** slide finger left to right on screen to display Play Settings sub menu

**NOTE:** Use ◀, ▶ and ▶|| buttons or slide your finger up or down and touch the menu option for navigation and selection

- Repeat [Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random, Intro], or touch  icon to display Repeat Mode sub menu.

- Exit

 **NOTE:** Touch  icon to display Equalizer sub menu [Natural, Rock, Pop, Classic, Soft, Jazz, DBB]

**NOTE:** Slide finger **right to left** on screen or touch  icon to go back to the previous screen

## **USB Disk**

The player can be used as a standard USB disk, supports the following operating systems: Windows 2000/ME, XP, Vista, 7 & 8, Mac OS 10.3 or higher, Linux, Redhat 8.0, and above.

The player also supports USB charge, and it can be used while it's getting charged (in USB mode, Press ▶|| to exit to the Main menu and use the player.

**NOTE:** In USB Disk mode the player's memory appears as a **Removable Disk** under computer's File Manager (Windows Explorer or Finder). You can drag and drop any files from your computer's hard drive to removable disk.

## **Upgrade Player's Firmware**

Please check our support website [www.hitusa.com](http://www.hitusa.com) or email [help@hitusa.com](mailto:help@hitusa.com) to check if a new firmware is available for this player. If a new firmware is available it will be emailed to you with instructions to upgrade the firmware.

## TROUBLESHOOTING

No power	Make sure the battery is charged and Press & hold <b>▶</b> button to turn on the player
No sound in earphone	Check to make sure the volume level is not set to "0" and the earphone is properly inserted into the earphone jack
Abnormal words displayed on the screen	Check if you've chosen the right language
Cannot download music successfully	Check USB cable is connected properly to the computer and MP3 player. Make sure there is free space on the player's memory to store new files
Some or all of the songs I downloaded cannot be seen on the player when playing songs	Make sure the songs files are in one of the supported music file formats.

## TECHNICAL SPECIFICATIONS

Screen	1.5" color CSTN display (128x128) 65K	
PC connection	USB2.0 (HIGH SPEED)	
Memory	2GB-8GB	
Power	Lithium battery	
	Sampling rate	8KHz
	Recorded file format	WAV(32Kbps, 64Kbps or 128 Kbps)
	Recorder time	60, 30 or 15 hours/GB
MP3, WMA	Earphone output	(L)5mW+ (R) 5mW (32ohms)
	MP3 bit rate	8k bps 320K bps
	WMA,WMAV,ASF bitrate	5k bps 384K bps
	Frequency	20Hz to 20KHz
	Signal-to noise rate	85dB
Supported File formats	MP3, WMA, AMV, JPEG, GIF, BMP, TXT	
Language select option	French, English, Italian, Dutch, Portuguese, Spanish, Russian, Arabic, Simple-Chinese, Traditional-Chinese, Japanese, Korean, Thai, Swedish, Danish, Czech, Polish, Slovakian, Hungarian, Romanian, Turkish, Slovenian, Hungarian, Romanian, Turkish, Slovenian & Hebrew	
Operation system	Windows98/SE/ME/2K/XP/7/8, MacOS10 or higher, Linux2.4.2 or higher	
Operation temperature	-5°C to 40°C degree	
Dimensions	58.5*41*15mm	

**NOTE:** Product design and specifications may change without prior notice

## LIMITED 90-DAY WARRANTY

**Coverage:** Hi-Tech Trading (USA), Inc. (“HiTT”) warrants this product (“product”) against defects in materials and workmanship under normal consumer use for 90 days from the date of purchase. HiTT, at its option, will at no charge repair, replace or refund the purchase price of this product should it not conform to this warranty. This limited warranty is a consumer’s exclusive remedy, extends only to the first consumer purchaser, is not transferable and is valid only on products purchased by consumers in the United States or Canada.

**Exclusions:**

**Normal Wear and Tear:** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries: During warranty period,** only the batteries whose fully charged capacity falls below 80% of their rated capacity or the batteries that leak are covered by this limited warranty.

**Miscellaneous:** This warranty does NOT cover defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the Product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Product for commercial purposes or subjecting the Product to abnormal usage or conditions; (d) service, installation, alteration, or modification in any way by someone other than HiTT and, (e) other acts which are not the fault of HiTT.

**Obtaining Service:** To obtain service or information, please send email to [help@hittusa.com](mailto:help@hittusa.com). You will receive instructions on how to ship the Product, at your expense, to a HiTT Service Center. To obtain service, you must include a copy of your receipt.



## COMPANY & CONTACT INFORMATION

**Hi-Tech Trading USA Inc**  
**P.O. Box 179**  
**Woodbury, NY 11797 U.S.A**  
**Web: [www.hittusa.com](http://www.hittusa.com)**  
**Email: [help@hittusa.com](mailto:help@hittusa.com)**

ZOpid and the Stylized Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

**© 2012 Hi-Tech Trading USA Inc**

The information contained in this User Manual is believed to be correct at the time of printing. HiTT reserves the right to change or modify any information or specifications without notice. The contents of this User Manual are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.