

DIGITAL VIDEO MEMO w/ FRIDGE MAGNET USER MANUAL

ZOpid®
HF-Z018VM



The pictures, diagrams, and certain functions described in this manual may differ from the actual product due to different models

Visit www.hittusa.com for a revised user manual or troubleshooting tips

PREFACE

We express our sincere thanks for purchasing this Digital Video Memo (DVM)!

Before operating this DVM, be sure to read this user manual carefully. After reading it, please keep it in a safe place for future reference.

We reserve the right to make changes to this DVM, Software and/or this User Manual without notice. Please visit our support website www.hittusa.com for additional product information and/or updates.

NOTE: The pictures, diagrams and certain functions described in this manual may differ from the actual product due to different models.

PRECAUTIONS


Before operating this DVM, please read the following precautions carefully:

- Do not operate this DVM in extremely cold, hot, dusty or damp environment
- Avoid putting this DVM under direct sunlight
- Do not scrub this DVM with a hard thing; it may result in scratches on the screen and/or damage to the hardware
- Keep this DVM and all accessories out of reach of children under the age of 3 years.

KEY FEATURES

- 1.8" LCD Display
- Video/Audio recording and playback
- Built-in storage for 80 seconds recording time
- Multi-message recording (max. 15 clips)
- Built-in speaker and magnet
- Long battery life (up to 30 days in standby mode)
- Requires 2 AAA batteries (not included – use alkaline batteries)
- Auto power save mode

BUTTONS & INTERFACE

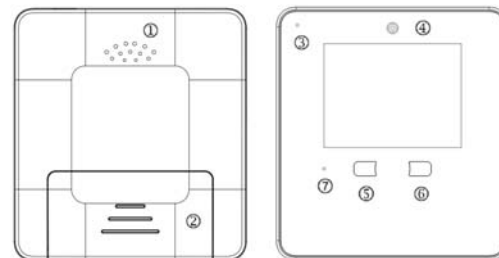


Control Key

- | | |
|-----------------------|--------------------------|
| ① Speaker | ⑤ Power / Play Button |
| ② Battery Compartment | ⑥ Record / Delete Button |
| ③ Message Indicator | ⑦ Microphone |
| ④ Camera | ⑧ Magnet |

GETTING START

Open the battery compartment by pressing on the latch. Insert two pieces of AAA (LR03) batteries and close the battery compartment. **NOTE:** Use alkaline batteries for long battery-life.

Press ⑤ for 2 seconds to power up the video memo (VM). Once power up, the VM will be in **VIEW FINDING MODE**. To power off, simply press ⑤ again for 2 seconds.

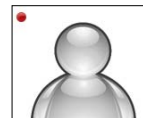

VIDEO RECORDING

While in **VIEW FINDING MODE**, face the camera ④ on the front of the VM and press the record button ⑥ to start recording a video message. For best

result, position yourself about 30cm (12in) from the microphone ⑦.




While in **RECORDING MODE**, a flashing ● REC icon will appear on screen. Press the record button ⑥ again to stop recording. Recording will be stopped automatically if the video length has reached 80 seconds.

The video message will be played back instantly for your review. The on-screen counter indicates the total number of recorded messages. After instant playback, the VM will go back to **VIEW FINDING MODE**, and is ready for recording another message or playback of previously recorded messages.



MEMORY FULL

A maximum of 15 recordings or 80 seconds can be stored on the VM. When memory is full, user must delete old messages before new recordings can be done.

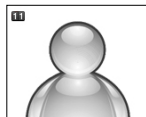

VIDEO PLAYBACK

While in **VIEW FINDING MODE**, press the play button ⑤ to view recorded messages. During playback, the on-screen counter shows the current message number.. To view the next message, press the play button ⑤ while in **PLAYBACK MODE**.



DELETE MESSAGE

While in **VIDEO PLAYBACK** mode, press the delete button ⑦ to delete the current message, press the delete button ⑦ again to confirm or press the play button ⑤ to cancel.



MESSAGE INDICATOR

When there are new messages, a Ellipses icon will appear on screen in **VIEW FINDING MODE**, or the message indicator ③ will flash if the VM is turned off.

BATTERIES LOW

Change batteries when the screen flashes continuously. Use major brand alkaline batteries only.

AUTO OFF

The VM will switch to power save mode automatically if there is no activity in **VIEW FINDING MODE** for more than 30 seconds.

FACTORY RESET

Press ③ for 5s, then press ⑤ and ⑥ together for 30s to perform a factory reset. Do not release the buttons during the factory-reset sequence.

TROUBLESHOOTING TIPS

Video and Audio quality is not good.	Make sure the DVM is placed in a well lighted place and speak in loud voice while memo recording.
Frame does not power on	Make sure you are using new set of batteries & batteries are installed properly.
Batteries do not last too long	Make sure to use alkaline batteries for long battery life

LIMITED 90-DAY WARRANTY

Coverage: Hi-Tech Trading (USA), Inc. ("HiTT") warrants this product ("product") against defects in materials and workmanship under normal consumer use for 90 days from the date of purchase. HiTT, at its option, will at no charge repair, replace or refund the purchase price of this product should it not conform to this warranty. This limited warranty is a consumer's exclusive remedy, extends only to the first consumer purchaser, is not transferable and is valid only on products purchased by consumers in the United States or Canada.

EXCLUSIONS:

Normal Wear and Tear: Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Miscellaneous: This warranty does NOT cover defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the Product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Product for commercial purposes or subjecting the Product to abnormal usage or conditions; (d) service, installation, alteration, or modification in any way by someone other than HiTT and, (e) other acts which are not the fault of HiTT.

Obtaining Service: To obtain service or information, please send email to help@hittusa.com. You will receive instructions on how to ship the product, at your expense, to a HiTT Service Center. To obtain service, you must include a copy of your receipt, receipt is not required if you registered your product on our website www.hittusa.com within 30 days of purchase date.

COMPANY & CONTACT INFORMATION

Hi-Tech Trading USA Inc
P.O. Box 179
Woodbury, NY 11797 U.S.A.
Web: www.hittusa.com
Email: help@hittusa.com

ZOpid and the Stylized Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© 2010 Hi-Tech Trading USA Inc

The information contained in this User Manual is believed to be correct at the time of printing. HiTT reserves the right to change or modify any information or specifications without notice. The contents of this User Manual are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide