

# HEADSET MP3 PLAYER w/ FM Radio

**ZOpid**<sup>®</sup>

HE-ZM5800FM



**USER MANUAL**

## 1. PREFACE

We express our sincere thanks for purchasing this Headset MP3 Player with FM Radio!

Before operating this MP3 Player, be sure to read this user manual carefully. After reading it, please keep it in a safe place for future reference.

We reserve the right to make changes to this MP3 Player, Software and/or this User Manual without notice. Please visit our company's website listed on the product packaging for additional product information and/or updates.

**NOTE:** The pictures, diagrams and certain functions described in this manual may differ from the actual product due to different models.



## 2. PRECAUTIONS

 
Before operating this MP3 Player, please read the following precautions

carefully:


1. Do not operate this Player in extremely cold, hot, dusty or damp environment
2. Avoid putting this Player under direct sunlight for long period of time
3. Never spray or pour liquid onto MP3 Player casing. Clean the case and buttons with slightly damp soft cloth
4. Do not disconnect the Player from the PC during file transfers or data formatting of the player, it may corrupt the built-in memory, requiring it to be reformatted
5. Player's built-in memory is preformatted, but if you have to reformat the memory, please use FAT format. **Do not use FAT32 format.**
6. Do not drop the player, as the warranty does not cover damage due to accidents or user neglect. The warranty only covers manufacturing defects or flaws
7. The player will not play music while it is connected to the PC or an A/C charger
8. Keep this MP3 Player and all accessories out of the reach of children



### 3. MP3 PLAYER BUTTONS & INTERFACE

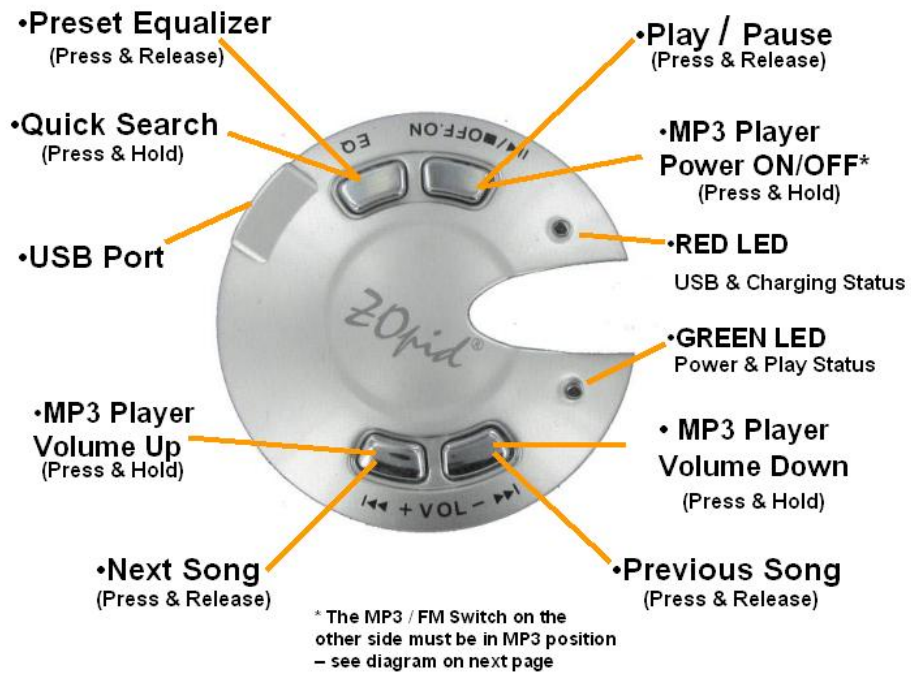

## FM RADIO BUTTONS & INTERFACE

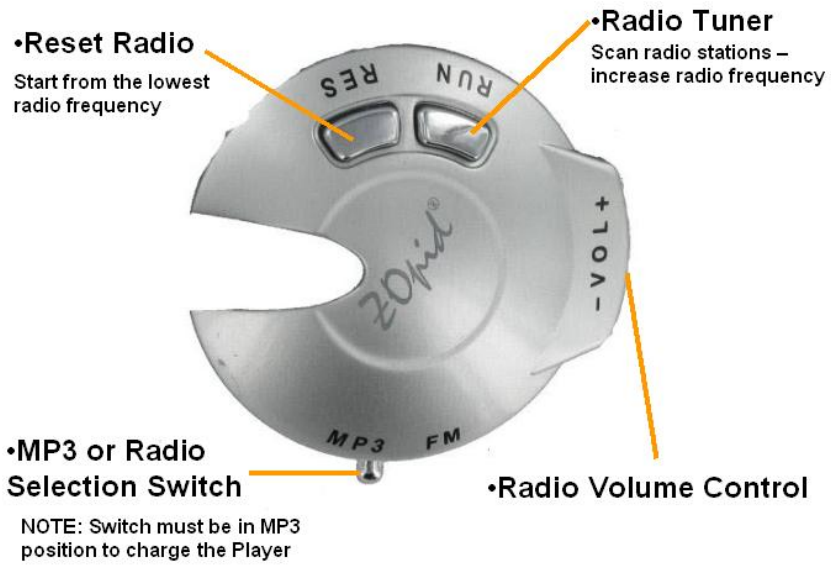 

#### **4. MP3 PLAYER OPERATING INSTRUCTIONS:**

**A. MP3 / FM Switch:** Make sure the switch is in MP3 position to use the headset as an MP3 Player

**IMPORTANT:** The switch must be in MP3 position to charge the battery

#### **B. ON/OFF Button (Controls: On, Off, Standby, Play & Pause)**

**MP3 Player Power On (Standby Mode):** Press & hold "ON/OFF" button for about 3 seconds, both Red and Green LED indicators will blink and then the Green LED will stay ON while the RED LED will turn OFF, indicating that the player is in Standby mode.

**NOTE:** The player automatically powers off if kept in Standby Mode for more than 30 seconds.

**Play Mode:** When the player is in Standby Mode, press and release "ON/OFF" button to start playing the songs. The green LED blinks while the songs are playing.

**Pause:** When the player is in Play Mode, press and release "ON/OFF" button to pause the song (Green LED will become steady green and stop blinking). Press and



release “ON/OFF” button again to start playing the song.

**MP3 Player Power Off:** Press and release ON/OFF button to stop playing the song and the press and hold ON/OFF button for about 3 seconds to turn off the player. Both Red and Green LEDs will turn on for a second and then turn off, indicating the player is turned off.

**C. EQ Button (Controls: Preset Equalizer and Quick Search):**

**Preset Equalizer:** To change preset equalizer effects, press & release EQ button while the player is playing songs.

**Quick Search:** Press and hold EQ Button for a couple of seconds to enter Quick Search Mode. During this mode only the first ten (10) seconds of each song are played. Once the player plays the song you like, press and hold the EQ button for 3-4 seconds to switch back to normal play mode and listen to the complete song.

**D. MP3 Player Volume+, Volume- Buttons (Controls: Volume Adjustment and Song Selection):**

**Volume Adjustment:** Press and hold the Vol+ or Vol- button to adjust the MP3 Player



volume up or down respectively

**Song Selection:** Press and release (tap) Next or Previous button once to play next or previous song respectively

## **E. Charging Player's Battery**

**IMPORTANT: MP3 / FM selection switch must be in MP3 position to charge the battery**

Player's built-in rechargeable battery can be charged through computer's USB port using USB cable or an A/C charger (optional)

While the player is charging, the RED and GREEN LEDs will remain on. When the battery is fully charged, the green LED will turn off and the red LED will remain on.

**NOTE:** The player's battery must be fully charged each time, in order to extend the battery life and optimize playing time. Battery usage may vary depending on volume level, file compression, and other environmental conditions.





### **Low Power Status:**

When the battery power is very low, the player automatically power-off.

**NOTE:** The player powering off within few seconds of turning on the power, is an indication that either the battery needs recharging or there are no MP3 or WMA files on the Player's built-in memory

### **F. Copying Songs to the Player**

**FOR WINDOWS 98SE USERS ONLY:** Please install USB driver from the included Driver Disk BEFORE connecting MP3 Player to your computer for the first time

1. Plug the USB Cable included with your player into any available USB port on your computer and the other end of the USB cable into the USB port on the Player.

**NOTE:** It may take a couple of minutes for the computer, running Windows ME, 2000 XP or Vista Operating System, to automatically install USB driver when the Player is connected to the computer for the first time – *No manual USB Driver installation is required*



2. The computer will recognize MP3 Player's built-in memory as a removable disk (Windows users will see a "Removable Disk" under "My Computer".)
3. Copy (Drag & Drop) MP3 or WMA files stored on the computer, or other storage or media devices connected to the computer, to the removable disk.

**IMPORTANT:** DO NOT DISCONNECT THE USB CABLE WHILE DATA IS BEING COPIED TO THE PLAYER. DOING SO MAY CAUSE DATA CORRUPTION AND WILL REQUIRE REFORMATTING THE BUILT-IN MEMORY

4. Disconnect the USB cable to use the MP3 Player to listen to the songs  
**NOTE:** MP3 player can be used for standard MP3/WMA song listening and also as a standard USB Drive to store other computer files. When in play mode, the player will ignore other files and only play MP3 & WMA files.



## **5. FM RADIO OPERATING INSTRUCTIONS:**

**A. MP3 / FM Switch:** Make sure the switch is in FM position to use the FM Radio  
**IMPORTANT:** In order to charge the battery, move the switch back to MP3 position

### **B. Radio Volume Control:**

**Volume Adjustment:** Rotate the volume adjustment wheel up or down to increase or decrease the radio volume respectively

### **C. RUN (Radio Station Tuning) Button:**

Use this button to scroll through radio stations (change radio frequency). Tuning is very basic, start from the lowest frequency and move up through the stations by pressing RUN button. There is no way to go back once a station is passed, except for using the Reset button to start from the lowest frequency.

### **D. RES (Reset) Button:**

Use this button to reset the radio tuner to the lowest frequency.



## 6. TECHNICAL SPECIFICATIONS

Weight	2.1 oz (59.5 g)
Battery	Lithium 3.7V (approximately 8 hours of continuous use after a full charge)
Supported Audio Format	MP3, WMA
Internal Memory Support	Supports 128MB - 8GB
Equalizer Settings	5 Preset
Interface	USB
Encode/Decode Standard	ISO 11172-3(MPEG 1-Audio layer 3)
MP3 Data Flow Speed	32Kbps – 384Kbps
Power Requirements	DC 5V, 300mA
Output Frequency Range	20Hz – 20kHz
MP3 harmony wave distortion	<0.5%
Signal/Noise Ratio	>80dB
MP3 Track Separate Degree	<75dB
Data Upload/Download Speed	About 2.7Mbps
Accessories	A/C Adapter, USB Cable, User Manual



## 7. FREQUENTLY ASKED QUESTIONS

**Q: Why can't I turn on the power to use MP3 Player?**

A: Make sure that the MP3 / FM switch is in MP3 position, also make sure that you charged the battery while the switch was in MP3 position

**Q: How do I charge the MP3 Player?**

A: Make sure MP3 / FM switch is in MP3 position, then to charge players' built-in battery connect the player using USB cable to a computer's USB port or an A/C charger.

**Q: Can I use the player while it's getting charged?**

A: No, the player cannot be used while it is getting charged.

**Q: Why does the player turn-off soon after I turn on the power?**

A: The player powering off within few seconds of turning on the power, is an indication that either the battery needs recharging, there are no MP3 or WMA files on the player's built-in memory, or the memory got corrupted - which requires to re-format the player's memory through your computer (Note: use FAT format to re-format memory)

**Q: What media formats does the Player support?**

A: MP3 and WMA formats - without Digital Rights Management (DRM)

**Q: I have songs copied to the built-in memory but why can't the Player play these songs?**

A: Make sure that songs are MP3 or WMA format and are not copy protected (DRM)

**Q: What if I have any other questions about the Player?**

A: You can visit our website [www.hittusa.com](http://www.hittusa.com), or email [help@hittusa.com](mailto:help@hittusa.com) for assistance



## Limited 90-Day Warranty

**Coverage:** Hi-Tech Trading (USA), Inc. ("HiTT") warrants this MP3 Player ("product") against defects in materials and workmanship under normal consumer use for 90 days from the date of purchase. HiTT, at its option, will at no charge repair, replace or refund the purchase price of this product should it not conform to this warranty. This limited warranty is a consumer's exclusive remedy, extends only to the first consumer purchaser, is not transferable and is valid only on products purchased by consumers in the United States or Canada.

**Exclusions:**

**Normal Wear and Tear:** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries:** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Miscellaneous:** This warranty does NOT cover defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the Product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Product for commercial purposes or subjecting the Product to abnormal usage or conditions; (d) service, installation, alteration, or modification in any way by someone other than HiTT and, (e) other acts which are not the fault of HiTT.

**Obtaining Service:** To obtain service or information, please send email to [help@hittusa.com](mailto:help@hittusa.com). You will receive instructions on how to ship the Product, at your expense, to a HiTT Service Center. To obtain service, you must include a copy of your receipt.



## COMPANY & CONTACT INFORMATION

Hi-Tech Trading (USA); Inc.  
P.O. Box 179  
Woodbury, NY 11797 U.S.A.  
Web: [www.hittusa.com](http://www.hittusa.com)  
Email: [help@hittusa.com](mailto:help@hittusa.com)

ZOpid and the Stylized Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© 2009 Hi-Tech Trading (USA); Inc.

The information contained in this User Manual is believed to be correct at the time of printing. HiTT reserves the right to change or modify any information or specifications without notice. The contents of this User Manual are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

